


MP wall mounting cabinet assembly
step schematic

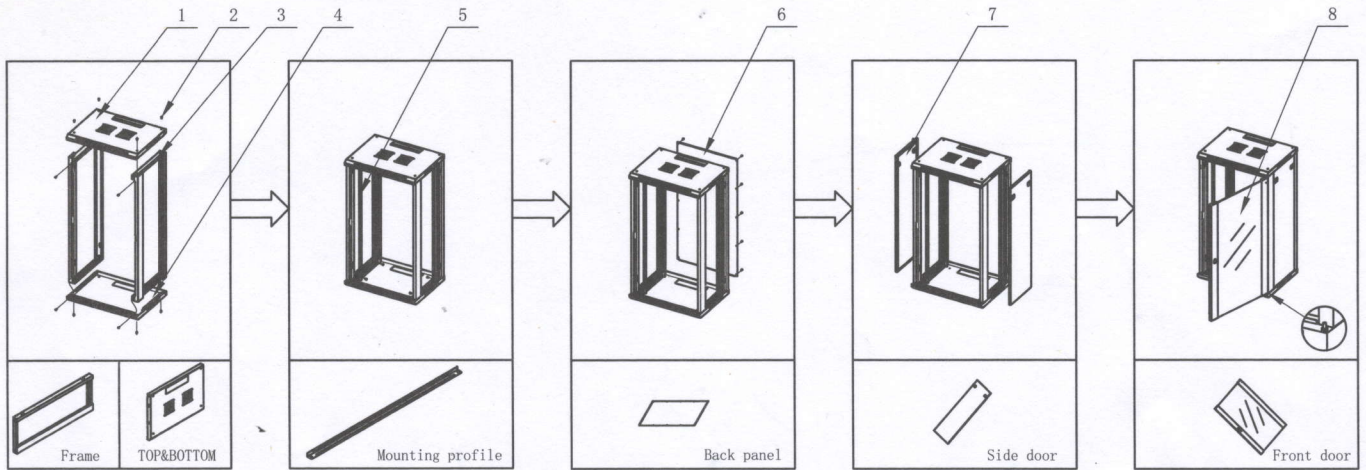

(1)
Assembling the Top&Bottom
and frame with M5.5 * 10
self-tapping screw

(2)
Fixed the mounting profile
on the mounting angle with
four M5.5 * 10 self-tapping
screw, and measure the distance
between 2pcs transverse
mounting profile in 19"

(3)
Fixed the back panel on
the frame with M5.5 * 10
self-tapping screw

(4)
Inset the feet on the
bottom of side panel
into the small square
hole on the bottom frame,
make the quick opening
handle into the hole on the pole.

(5)
Put the door seat in the
bottom frame, then install
the front door on the cabinet.

1. Top cover	1PCS	5. Mounting profile	4PCS
2. M5.5 * 10 inner 6-angle self-tapping screw	30pcs(26pcs for below 18U)	6. Back panel	1PCS
3. Frame	2PCS	7. Side door(panel)	2PCS
4. Bottom	1PCS	8. Front door	1PCS